



ASSEMBLY INSTRUCTIONS

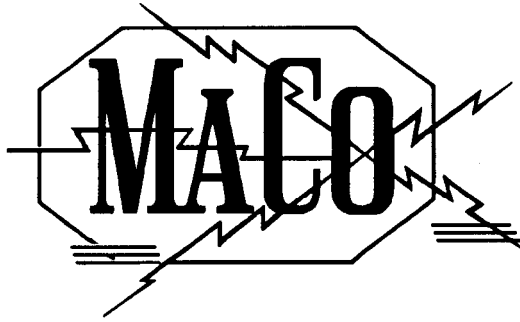

4 ELEMENT - 11 METER MAXIMUM BEAM

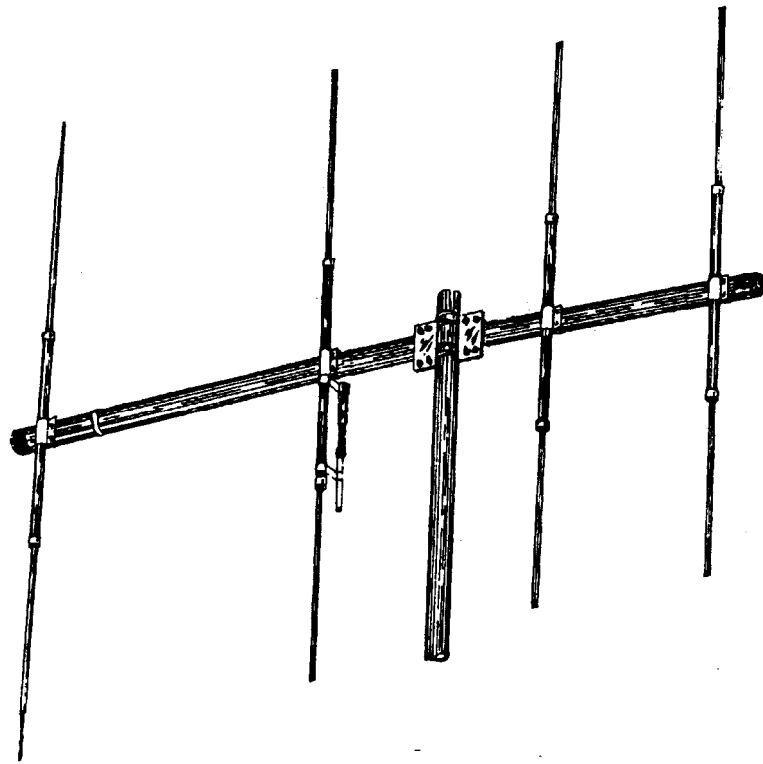

M104C

Maco Manufacturing Co. - Division of Majestic Communications, Inc.
4091 Viscount - Memphis, Tennessee 38118 (901) 794-9494

MACO M104C

PARTS LIST

<u>PART</u>	<u>QTY</u>	<u>SIZE</u>	<u>LENGTH</u>	<u>DESCRIPTION</u>	<u>CHECKLIST</u>
G01P	1			GAMMA MATCH	
P02P	1	5-1/4"		PLATE 1-1/2" BOOM TO 1-1/2" MA	_____
T01P	6	1/2"	72"	ALUM. TUBING	_____
T04P	2	1/2"	72"	ALUM. TUBING SLOTTED ONE END	_____
T11P	4	5/8"	72"	ALUM. TUBING SLOTTED BOTH ENDS	_____
T41P	1	2"	72"	ALUM. TUBING SWAGED BOTH ENDS	_____
T51P	2	2"	72"	ALUM. TUBING SLOTTED ONE END	_____
T58P	2	3/8"	11 7/8"	ALUM. TUBING	_____
<u>HARDWARE BAG #1</u>					
U01	10		2"	PLATED U-BOLTS	_____
<u>HARDWARE BAG #2</u>					
so1	10		2"	PLATED SADDLES	_____
<u>HARDWARE BAG #3</u>					
BE2P	4		2"	BOOM TO ELEMENT MOUNTS	_____
<u>HARDWARE BAG #4</u>					
co2	2	1/2"		METAL CLAMPS	_____
N01	20	5/16"		HEX NUTS	_____
NO2	20	5/16"		LOCKWASHERS	_____
N11	14	1 0-24		SQUARE NUTS	_____
N12	4	#10		LOCKWASHER	_____
PL1	2	3/8"		PLASTIC CAPS - BLACK	_____
PL2	6	.437		PLASTIC CAPS - BLACK	_____
PL5	1	2"		PLASTIC CAPS - BLACK	_____
PL5R	1	2"		PLASTIC CAPS - RED	_____
S21	13	10-24x1/2"		MACHINE SCREWS	_____
S42	1	5/8"		COAX CONN. W/ MOUNTING NUT	_____
W58P	10			EXTRUDED ALUM. CLAMPS	_____
Z02P	2			GAMMA STRAPS	_____
Z08P	2			GAMMA STRAPS F/COAX CONNECTOR	_____
SET OF INSTRUCTIONS					

WHEN ORDERING REPLACEMENT PARTS, ALWAYS GIVE PART NUMBER AND DESCRIPTION.

PLEASE NOTE: In an effort to keep the price on Maco Antennas down, we have decided not to clean up all the burrs and rough edges on the parts. We recommend that you deburr and clean up each part with files, sandpaper, etc. so that they go together easily. We are aware this needs to be done, but have elected not to do it to save you the money we would have to add to the price of the kit for this service.

MACO M104C

ASSEMBLY INSTRUCTIONS

FIGURE 1 GENERAL INSTRUCTIONS

This drawing shows a view of the antenna assembled. The M104C may be used vertically (Figure 1 A) or horizontally (Figure 1 B). These instructions and FIGURES 2 through 4 show the correct assembly instructions. It is highly recommended that rope be put in the elements to prolong their life. All Hardware should be tightened securely, and then coated with silicon rubber sealant or a similar compound to prevent loosening from wind vibration.

Upon completion of assembly, install the red plastic cap (PL4R) on the director end of the antenna, and the black plastic cap (PL4) on the reflector end. This will allow you to determine at a glance the direction of transmit and receive.

CAUTION.....

Take care to avoid any contact with overhead power lines when raising your antenna. Serious or fatal injury could result.

FIGURE 2 BOOM ASSEMBLY AND MAST MOUNTING

To assemble the boom, slide the slotted ends of the boom sections (T5 1 P) onto both swaged ends of the center boom section (T4 1 P). The overall length should be about 17 feet. Next center the boom-to-mast plate (P02P) and mount using 2" U-bolts, saddles and hardware as shown in detail 2B.

This antenna is designed for mounting on a 2" O.D. heavy duty mast. Mount using 2" U-bolts, saddles and hardware as shown in detail 2C.

FIGURE 3 ELEMENT ASSEMBLY AND MOUNTING

To assemble the elements, use (4) of the clamps (W58P) and #10 x 1/2" screw and square nuts (S2 1 ,N 1 1) as shown in the element assembly detail. Insert a length of the 1/2" O.D. unslotted tubing (T01P) into each end of the element sections. Adjust each end to the "B" dimensions and tighten the clamps. Check the overall length ("A" dimension). Push a 437" plastic cap (PL2) on each end of the elements.

Mount the elements onto the boom using U-bolts, saddles, and hardware (UO 1, S02, N01, N02) to fasten the boom-to-element clamp (BE 1 P) as shown in the element mounting detail. From the director end of the boom, measure in 5/8" to the outside edge of the mounting hardware and fasten the director. Refer to Figure 1 for the spacing dimensions and fasten the driven element and reflector. Start at about 4" from the end to center the elements on the boom.

Line the elements up with the use of a level or any other workable method. Double check the spacing dimensions and make sure the elements are centered in the boom-to-element clamps. Tighten all hardware taking care to line the elements up with the use of a level. Check your measurements and make sure the elements are centered on the boom.

TIGHTEN ALL HARDWARES NUG; DONOT CRUSH THE TUBING. CRUSHING GREATLY WEAKENS THE TUBING.

ASSEMBLY INSTRUCTIONS

(continued)

FIGURE 4 GAMMA MATCH MOUNTING

Mount the gamma match (G01P) to the driven element, using the gamma straps (Z02P, Z08P) and attaching hardware as shown. Attach your 52 ohm coaxial cable to the connector (S42) and dress along boom and down the mast. The gamma is shown pointing down - this is to let water out.

ADJUSTING THE STANDING WAVE RATIO (SWR)

Refer to Figure 4. The dimensions given are approximate and should be used as a starting point. The gamma match has 2 adjustments. First is the capacitor adjust and second is the slider adjust. Connect a SWR bridge coax between your transmitter and the antenna and check the SWR. If adjustment is required, loosen the clamp on the gamma match and the screws holding the slider (gamma straps (Z02P)). Next move the capacitor adjustment first one direction, then the other until a minimum SWR reading is obtained. If SWR is not yet satisfactory, move the slider out 2" away from the boom. If the reading has gone up move the slider back to the original position and then 2" towards the boom. Now readjust the capacitor for minimum SWR. You should now be able to determine which direction to move the slider. Repeat the above procedure moving the slider in smaller increments until a satisfactory SWR is obtained. Tighten all hardware. Disconnect the SWR bridge and reconnect your coaxial cable.

NOTE!

When assembling for vertical use, set antenna on a pole about 8 to 9 feet above the ground horizontally and adjust SWR for 1.6 to 1.7 When you turn the antenna vertical and mount it on the tower, etc., the SWR will drop to 1.4 to 1.5 This is good; QUIT!

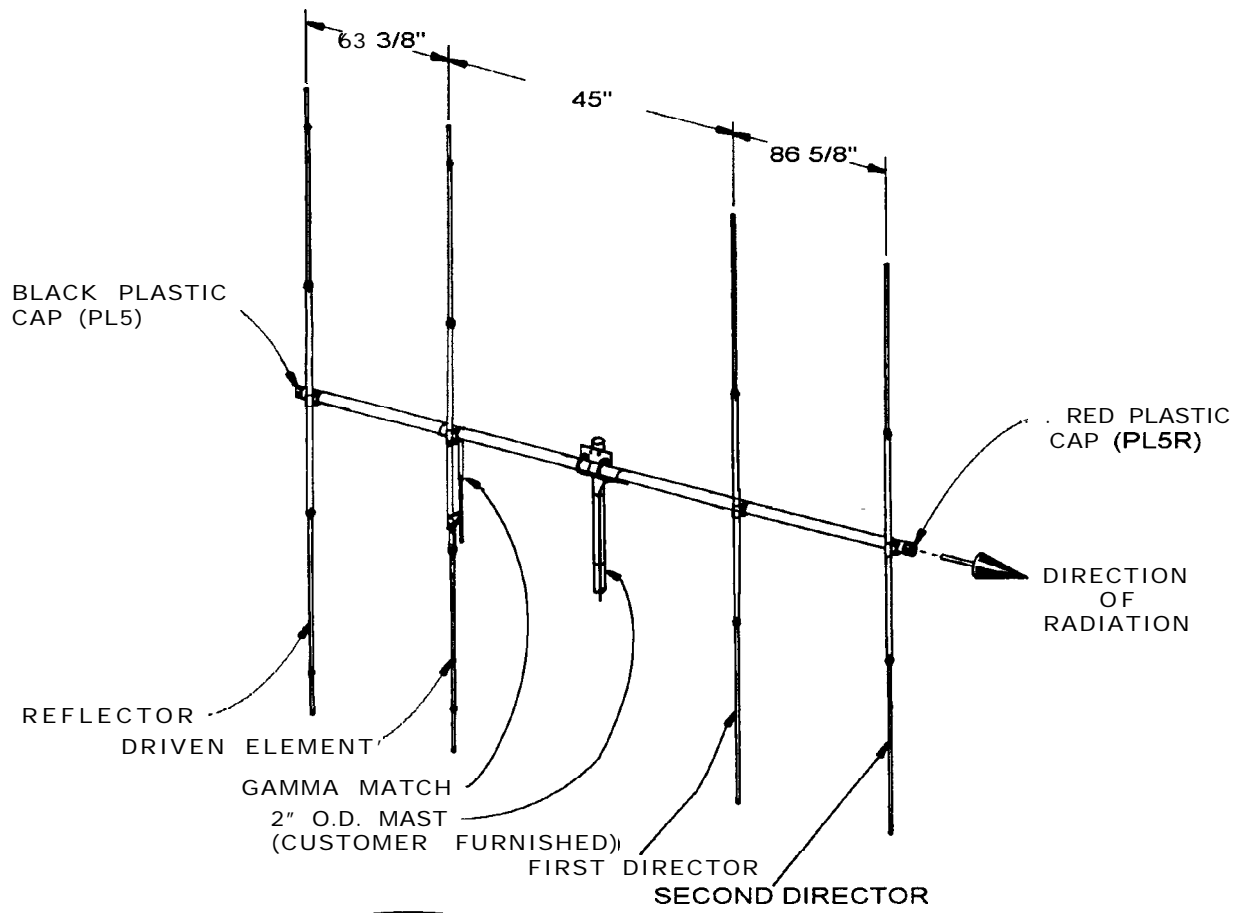


FIGURE 1A VERTICAL POLARIZATION





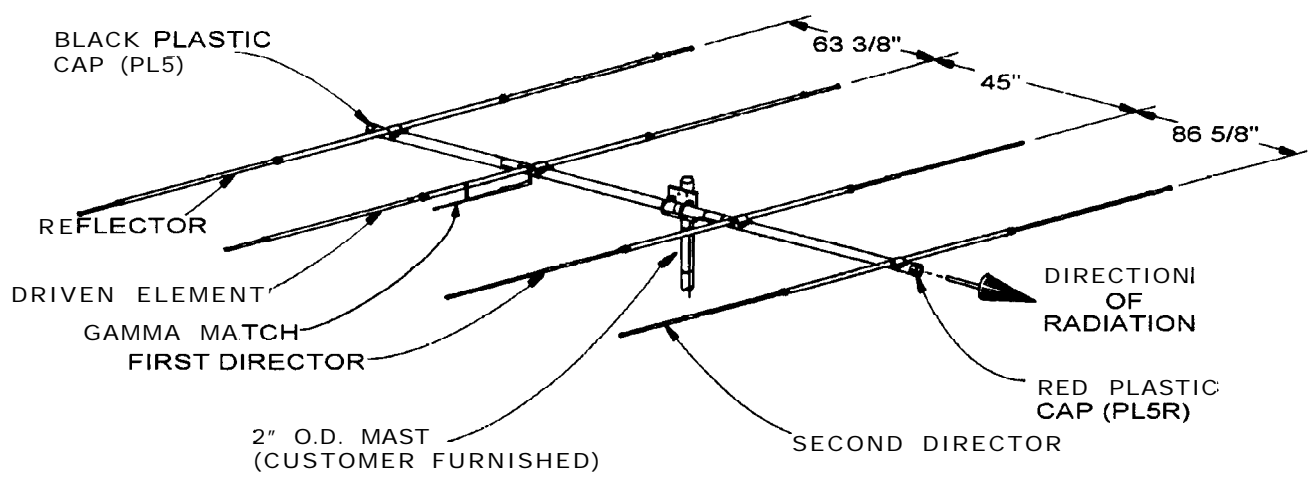


FIGURE 1B HORIZONTAL POLARIZATION

GENERAL ASSEMBLY

EM104C1

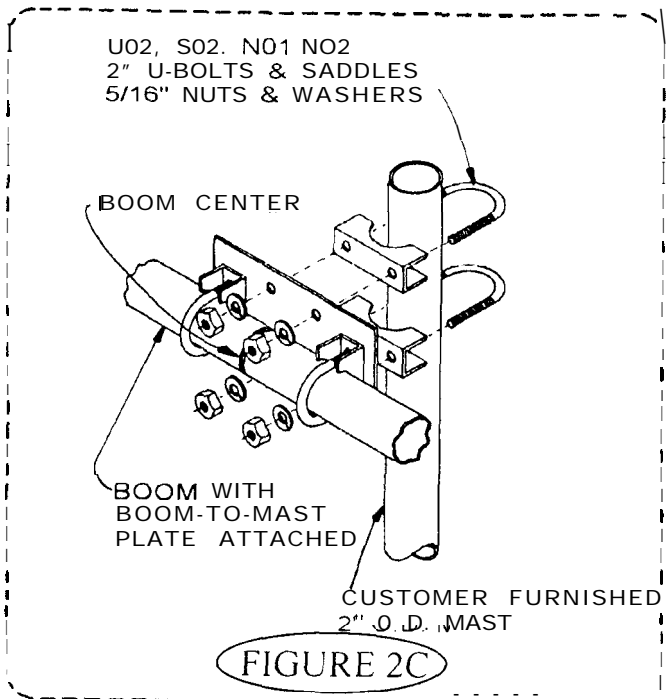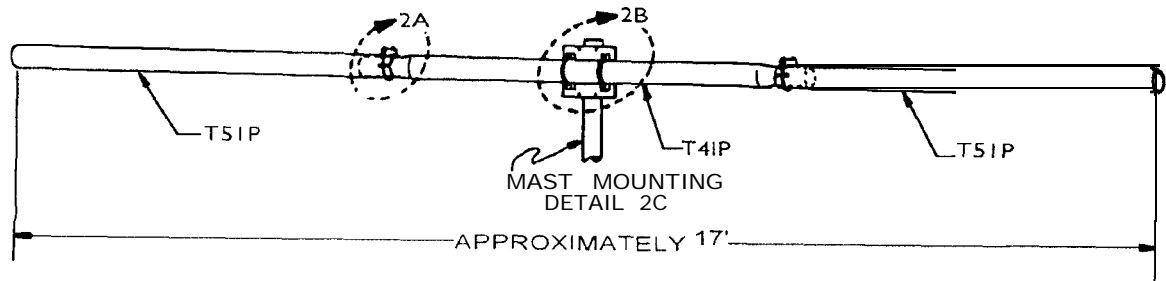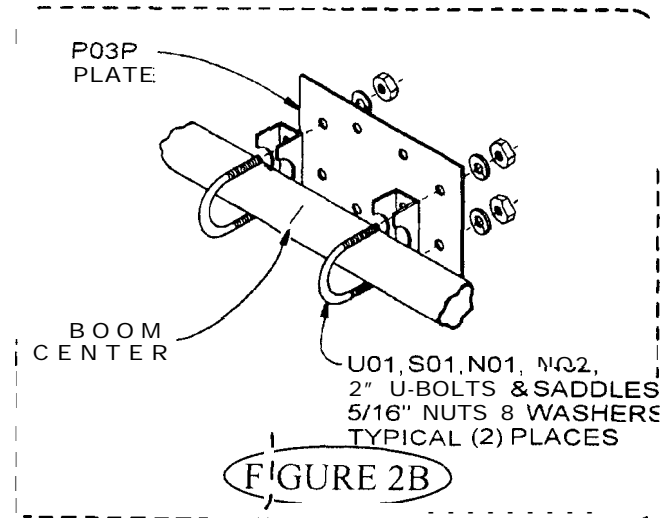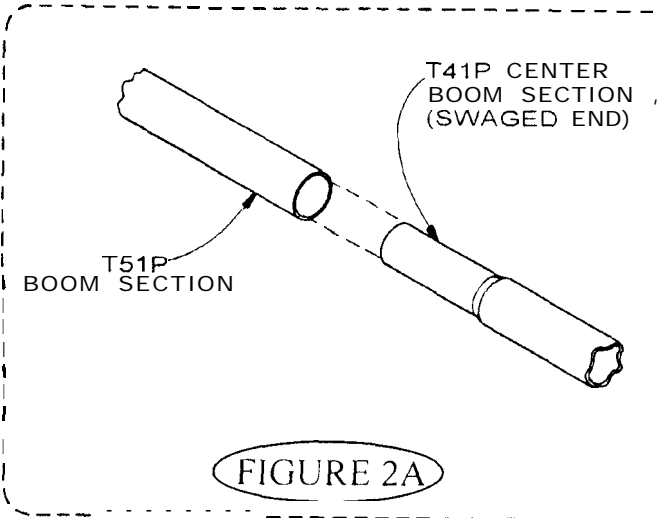

**BOOM ASSEMBLY
& MAST MOUNTING**

FIGURE 2

M104C

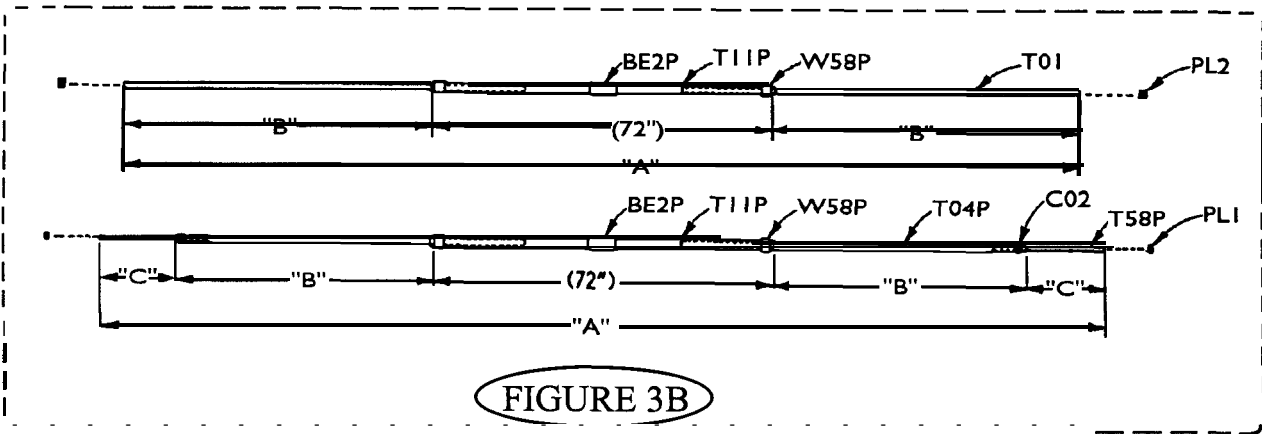


FIGURE 3B

ELEMENT ASSEMBLY
& MOUNTING

FIGURE 3

DIMENSIONS			
ELEMENT	A	B	C
DRIVER	209"	68 1/2"	
1ST DIRECTOR	204 3/4"	66 3/8"	
2ND DIRECTOR	188 1/2"	58 1/4"	
REFLECTOR	216 3/4"	65 1/2"	6 7/8"

FIGURE 3A

Please read the Assembly and Troubleshooting Tips at the end of this instruction booklet before assembling elements.


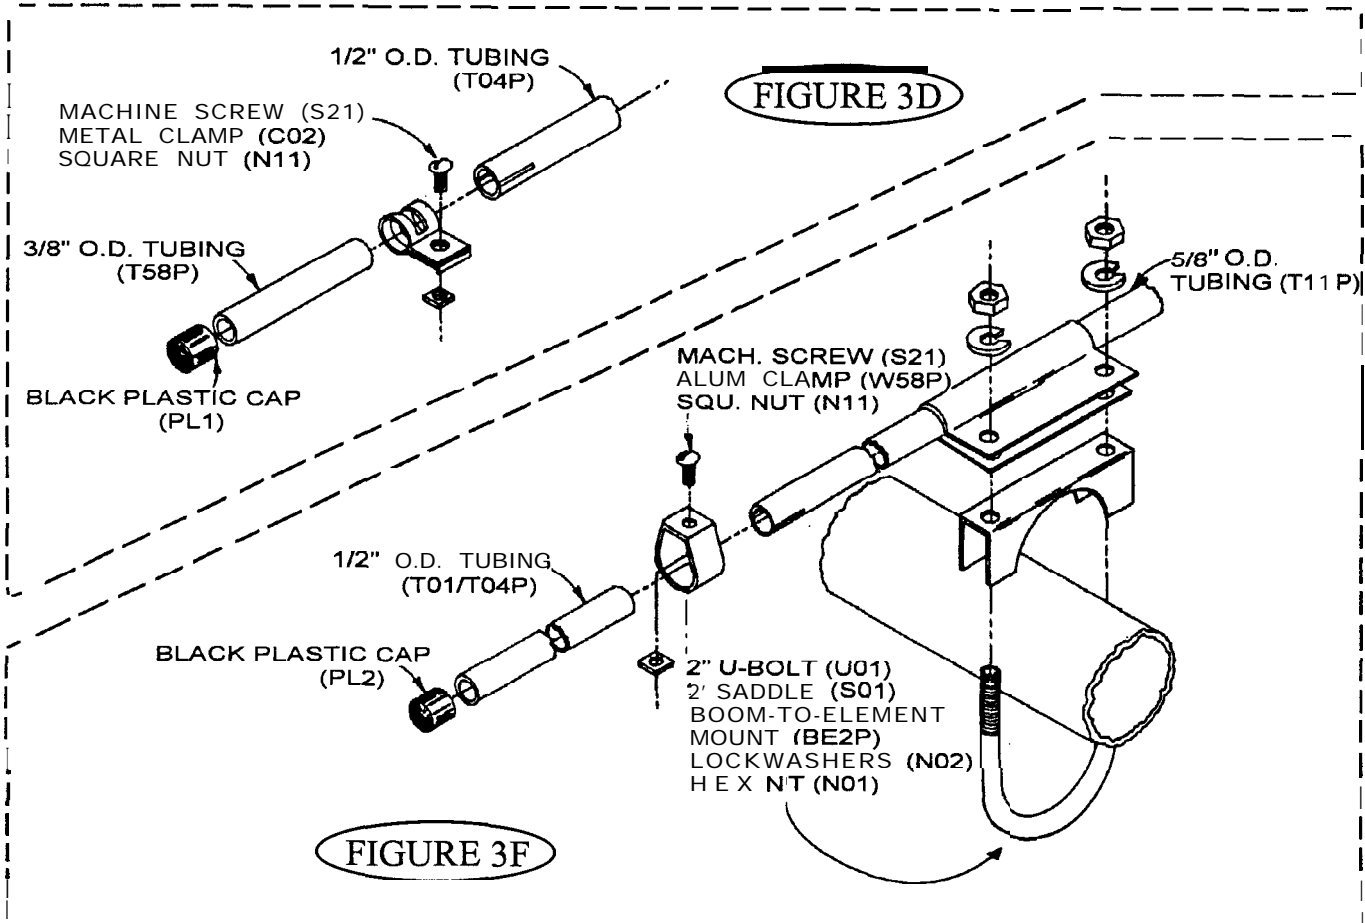


FIGURE 3D

FIGURE 3F

*** NOTE: THESE DIMENSIONS ARE APPROXIMATE. REFER TO THE INSTRUCTIONS ON ADJUSTING THE S.W.R TO DETERMINE EXACT SETTINGS. THERE ARE 2 SEPARATE GAMMA ADJUSTMENTS, 1. CAPACITOR ADJUSTMENT, 2. SLIDER POSITION. DO NOT MOVE BOTH AT THE SAME TIME. MOVE THE CAPACITOR FIRST, THEN, IF NECESSARY MOVE THE SLIDER, AND GO BACK TO THE CAPACITOR**

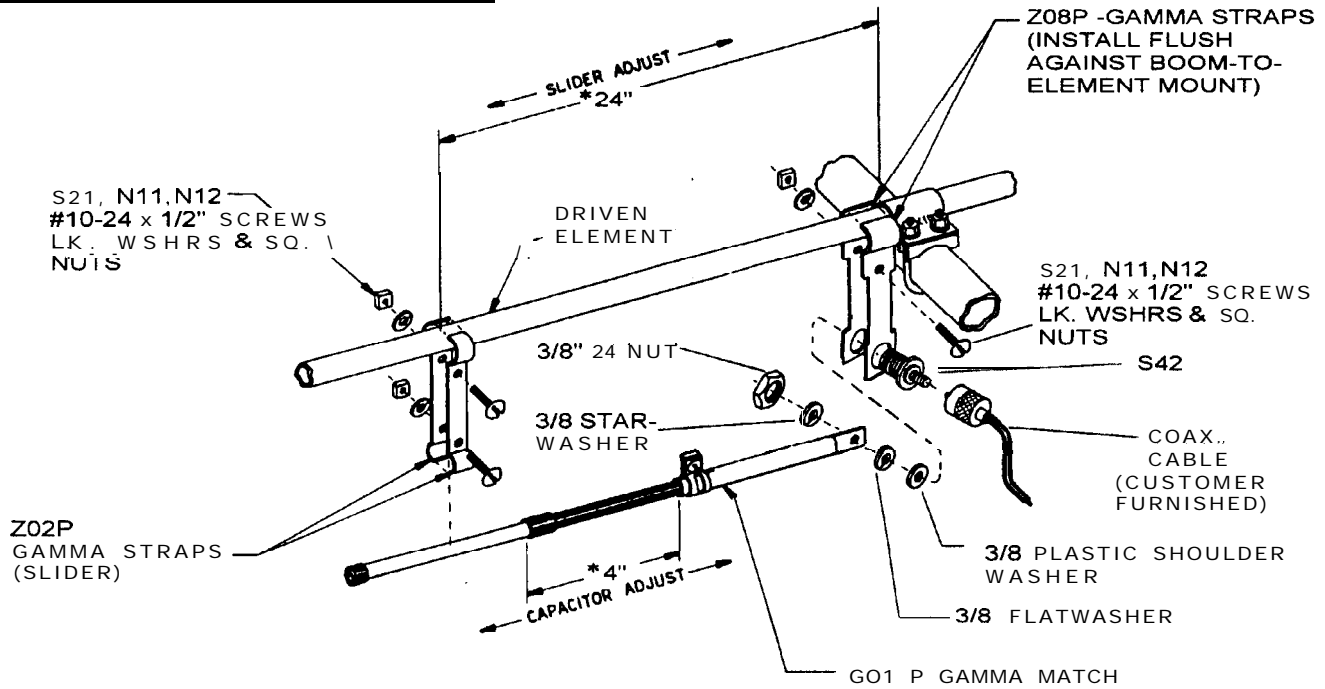

GAMMA MATCH MOUNTING

FIGURE 4

M104C

Mount the gamma match (G01P) to the driven element, using the gamma straps (Z02P, Z08P) and attaching hardware as shown. Attach your 52 ohm coaxial cable to the connector (S42) and dress along boom and down the mast. The gamma is shown pointing down - this is to let water out.

ADJUSTING THE STANDING WAVE RATIO (SWR)

Refer to Figure 4. The dimensions given are approximate and should be used as a starting point.* The gamma match has 2 adjustments. First is the capacitor adjust and second is the slider adjust. Connect a SWR bridge coax between your transmitter and the antenna and check the SWR. If adjustment is required, loosen the clamp on the gamma match and the screws holding the slider (gamma straps (Z02P)). Next move the capacitor adjustment first one direction, then the other until a minimum SWR reading is obtained. If SWR is not yet satisfactory, move the slider out 2" away from the boom. If the reading has gone up move the slider back to the original position and then 2" towards the boom. Now readjust the capacitor for minimum SWR. You should now be able to determine which direction to move the slider. Repeat the above procedure moving the slider in smaller increments until a satisfactory SWR is obtained. Tighten all hardware. Disconnect the SWR bridge and reconnect your coaxial cable.